Hrs: M-F 9am to 5pm EST


KICHLER.

CAUTION - RISK OF SHOCK Disconnect Power at the main circuit breaker panel or main fuse box before starting and during the installation.

- 1)
- Attach mounting plate to outlet box with the mounting screws provided. The fixture must be mounted vertically. Attach the grounding conductor to the mounting plate. Secure by tightening the green ground screw. Never connect black or white power supply wires to the grounding screw. Grounding instructions: (See Illus. A or B)

 On fixtures where mounting strap is provided with a hole and two raise dimples. Wrap ground wire from outlet box around green ground screw, and thread into 2)
- outlet box around green ground screw, and thread into hole.
- On fixtures where a cupped washer is provided. Put ground wire from outlet box under cupped washer and green ground screw and thread screw into hole in mounting strap. B)


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector, after following the above steps. Never connect ground wire to black or white power supply wires.

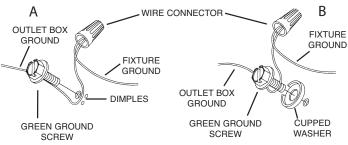

Make wire connections with provided connectors. Connect black wire to black wire. Connect white wire to white wire.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

 *Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- 5) Carefully push wire connections back into outlet box
- making sure all connections remain secure. Carefully push fixture to wall over mounting plate. Secure fixture to mounting plate by using fixture mounting screws.

